




## Saving a Copy of the Test Results Report

The test results report can be saved to a file. This file can be emailed along with any questions you may have about the test system or test program.


To save the test results report to a text file, follow the steps below.

1. Start the test system software so the four big blue buttons are shown (Main Window):

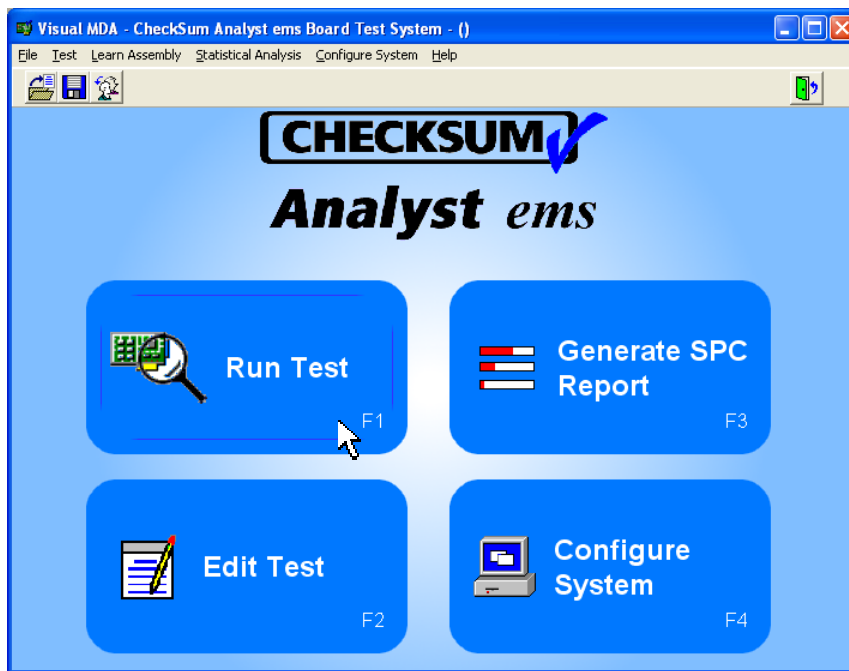


2. Click the "Run Test" blue button or press the F1 function key. If the test program is not loaded yet, select the test program to run from the Open file list and press OK.


- The Test window will show the test program status. When the test is completed (PASS or FAIL), click to select the menu item **Environment > Test Report Contents > Passes and Failures**:

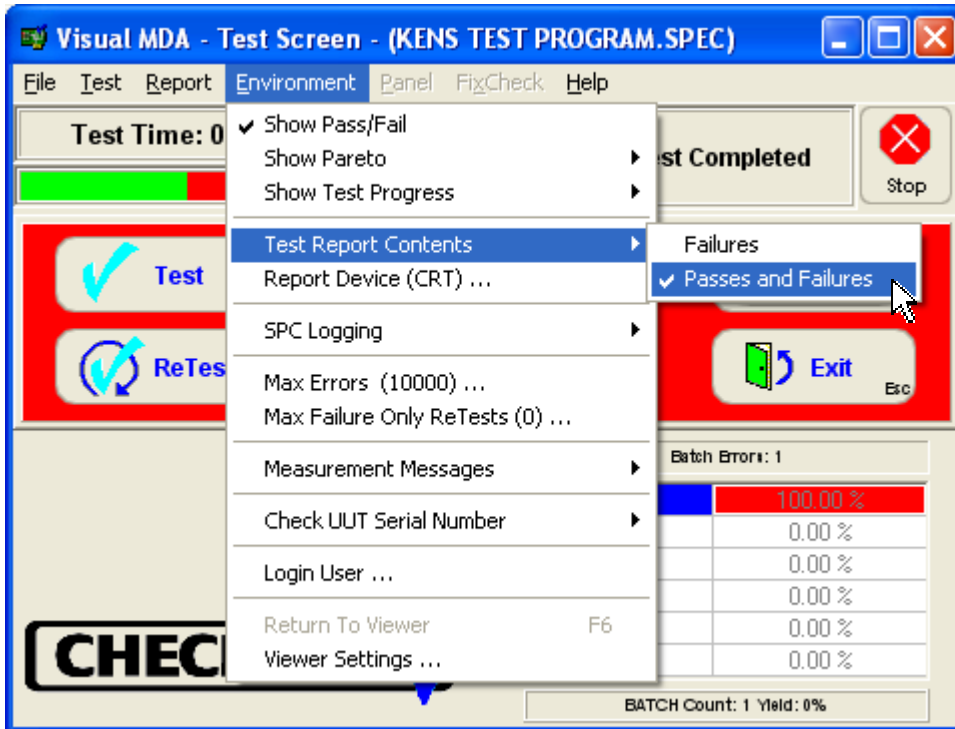


- Click the Report button or press the F3 function key:

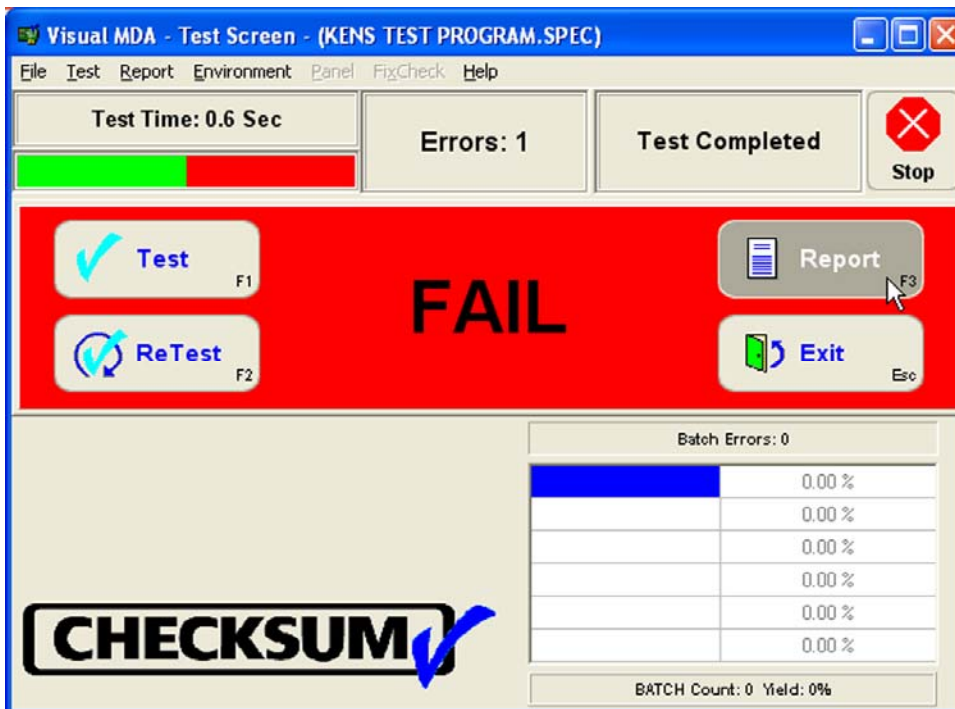

5. Click the **Print...** button at the bottom of the **Test Results Report** window:

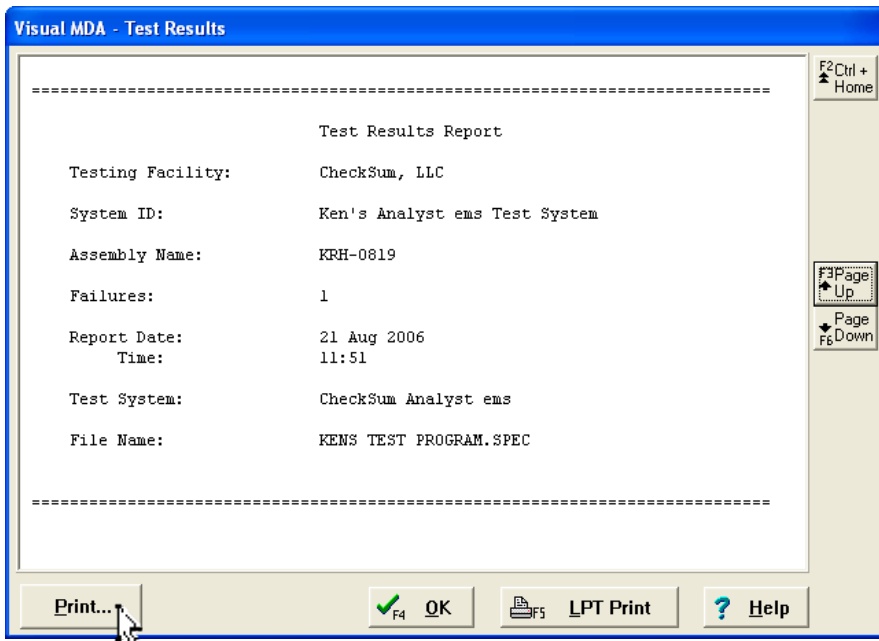

6. The Print window appears:

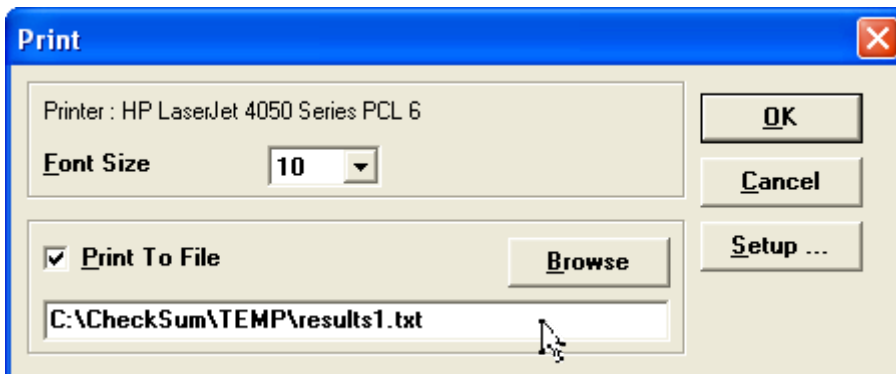

7. In the pop-up Print window: Click to select the check box to "Print To File"
8. Click the **Browse** button and select a location to save the file, such as **C:\CheckSum\TEMP**
9. Type in a file name such as "**results1.txt**"
10. Press the OK button

The file **results1.txt** can be printed for future reference.

This file can be emailed along with any questions you may have about the test program. To insure we have sufficient information to answer your questions, please include the test system configuration file and a copy of the test program file.